

DV - Drum Valve Coupler



User Instructions



Remove Tamper Evident cap (if installed).



Align coupler pins with corresponding slots in Drum Valve.



Rotate coupler clockwise 1/3 turn until it stops.



Push down handle to engage.



Coupler properly installed.
Ready to dispense.



Push down release tab with thumb allowing handle to come up.




Rotate coupler 1/3 turn counter clockwise until it stops. Coupler may now be removed.


Typical Rinsing System Diagram



Drum Valve Coupler with rinsing socket.

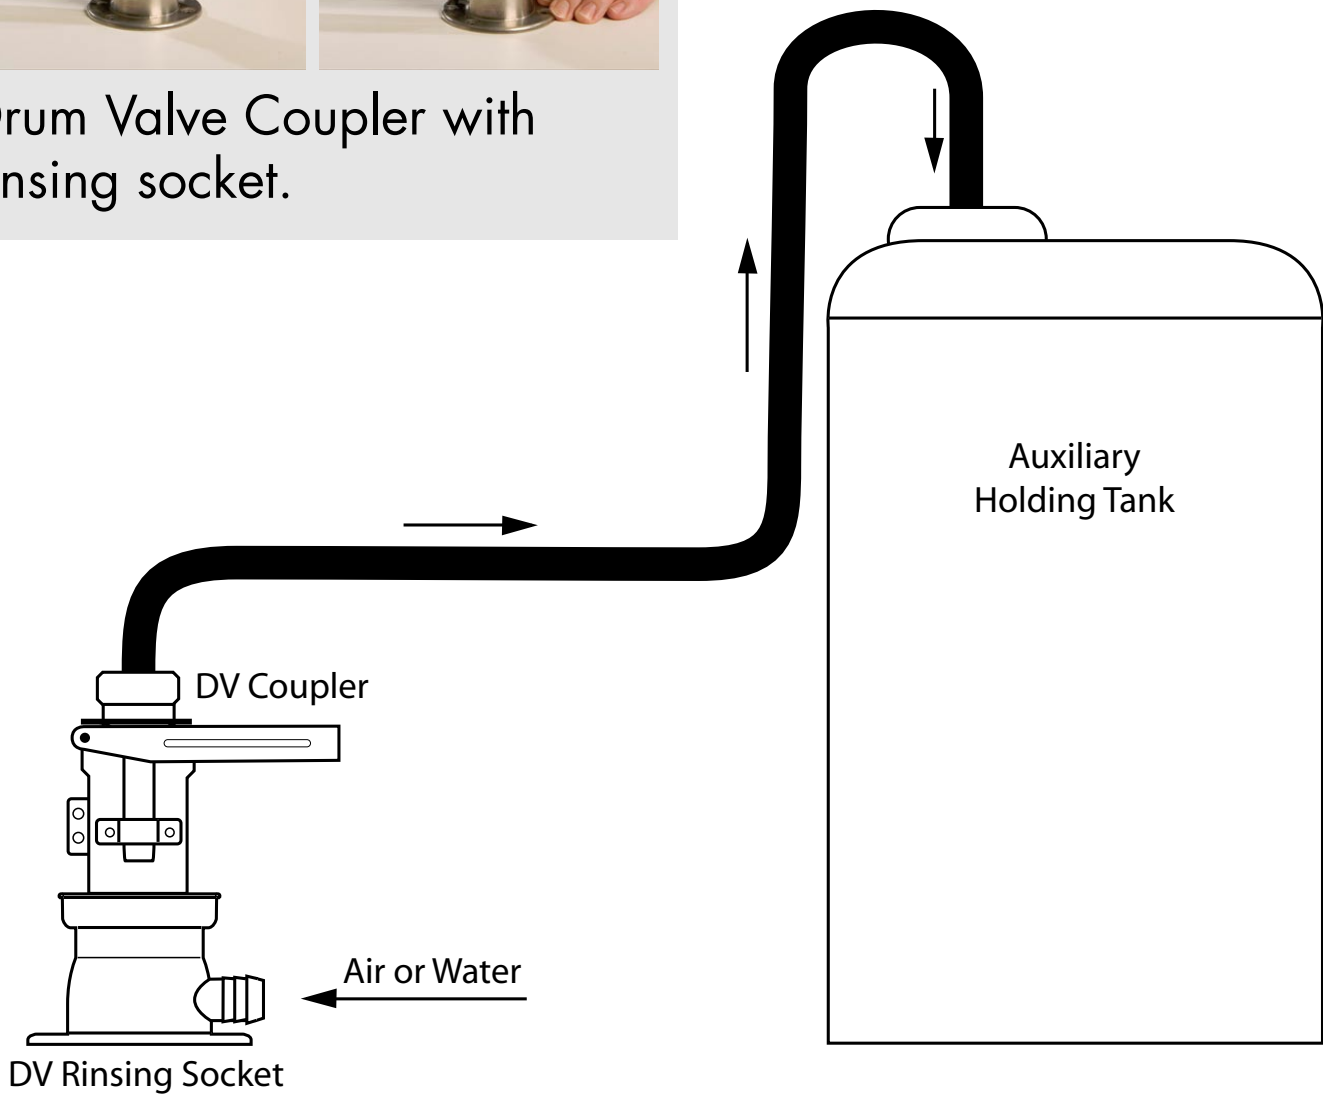


Typical system using Self Venting Coupler.

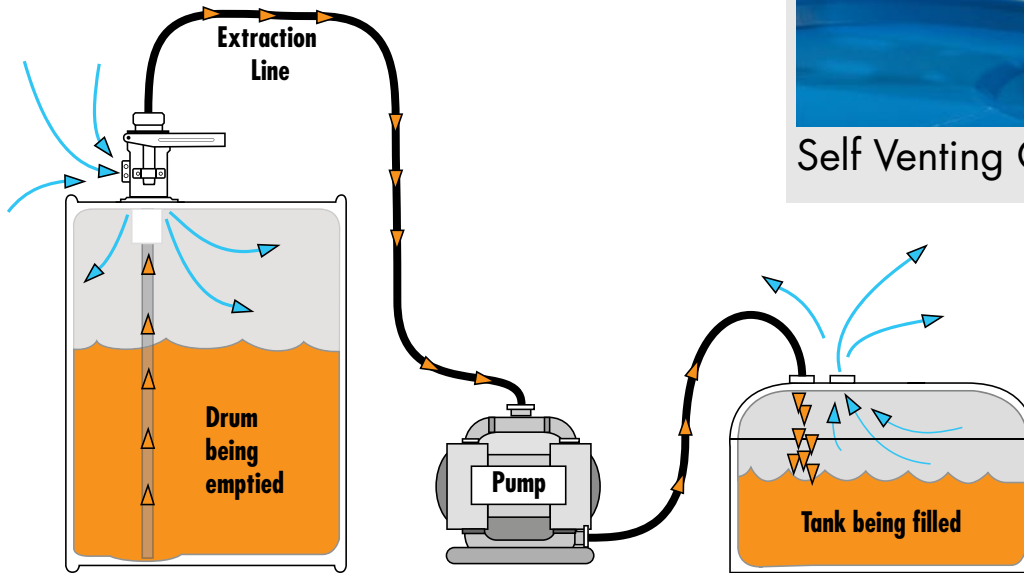

Self Venting Coupler.

Typical vapour recovery system using Vapour Recovery Coupler.

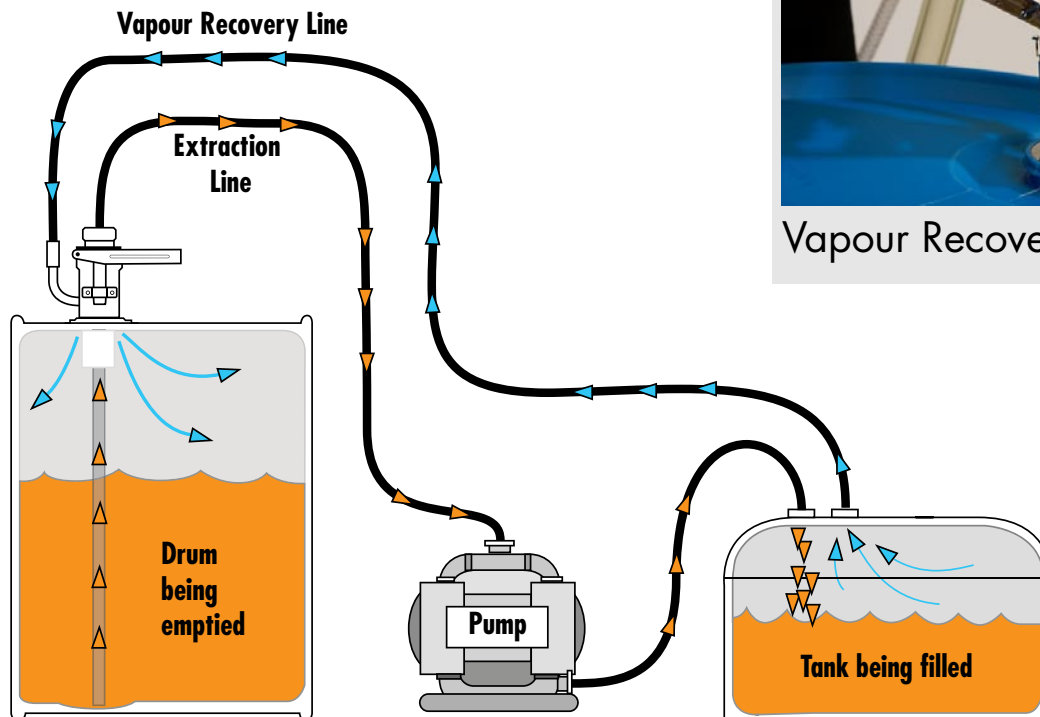

Vapour Recovery Coupler.