


# MAV - Macro Valve Fill Head



## User Instructions



MAV Vapour Recovery Fill Head with filling hose and vapor recovery hose attached.

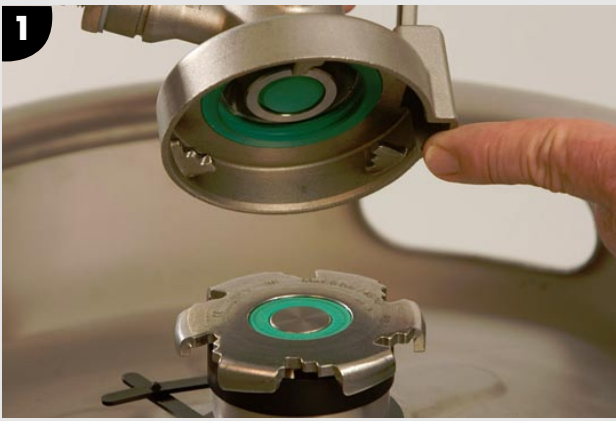

Align MAV Fill Head pins with slots in MAV Valve.



Rotate MAV Fill Head 1/6 of a turn clockwise.



Push down on the handle to engage the Fill Head. If engaged correctly, the handle will lock into position.

**CAUTION: The handle cannot be pushed down if the Fill Head is incorrectly connected to the valve. If necessary repeat to steps #1 thru 3.**

The container is now ready to be filled.

1

**Caution: Turn off pump first!**

Pull out on handle allowing handle to come up.

2



Rotate MAV Fill Head 1/6 of a turn counter clockwise.

The Fill Head can now be moved.